



## Pump Ordering Guide

The following information is required when ordering a replacement coolant pump from Flair America. For further specification to meet a particular application please visit [www.flairamerica.net](http://www.flairamerica.net)



<b>Step 1 Type of pump</b>	MC-Series Immersion Type		MC-Series Suction Type		SP-Series Filter Type		TPK-Series Multistage Type	
--------------------------------	-----------------------------	--	---------------------------	--	--------------------------	--	-------------------------------	--

<b>Step 2 Horse Power</b>	1/10	1/8	1/6	1/4	1/3	1/2	3/4	1	1-1/2
-------------------------------	------	-----	-----	-----	-----	-----	-----	---	-------

<b>Step 3 Power Supply</b>	1 x 115/230v, 60Hz Single Phase	3 x 230/460v, 60Hz Three Phase	3 x 575 ~ 600v, 60Hz Three Phase	Foreign Power, 50Hz Upon Request
--------------------------------	------------------------------------	-----------------------------------	-------------------------------------	-------------------------------------

<p><b>Step 4 Immersion Depth</b></p> <p>This is the dimension the pump sets into your coolant tank. Measure from the flange to the bottom of the pump.</p> <p>Dimension "L"</p> <p>Naturally this does not apply to the suction pump.</p> <p>L = _____</p>	
--	--

To place your order have your credit card information and call +1 (508) 987-0121 (Ask for Ray or Glen)

We accept most credit cards and in many cases we will ship same day via UPS.

