


FLAIR

PI09 / PI04 series

POSITION INDICATOR



COUNTING & READING DIRECTION:

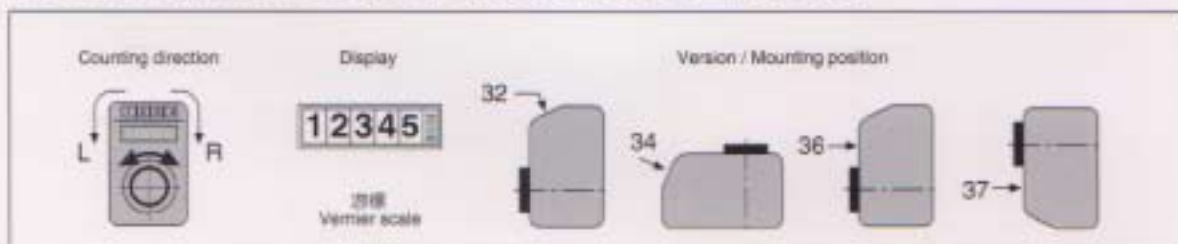

(mm) Counting direction	Indi / Rev	Indi / Rev	Indi / Rev	(RPM) Max. speed / min
0.5	0000.5	000.05	00005	1000
1	0001.0	000.10	00010	1000
1.5	0001.5	000.15	00015	750
2	0002.0	000.20	00020	750
2.5	0002.5	000.25	00025	600
3	0003.0	000.30	00030	500
4	0004.0	000.40	00040	450
5	0005.0	000.50	00050	300
6	0006.0	000.60	00060	250
8	0008.0	000.80	00080	180
10	0010.0	001.00	00100	150